

Complete Solutions

The Descon head space sterilizer provides a method for taking a single stream of upright hot-filled containers, gently lying them on their sides (90-degree to vertical) and then gently returning to an upright position before discharging.

Main Features

- No container body compression ensuring product integrity
- Continuous follow of containers ensure high on-demand output
- Modular construction to accommodate specific lay-down time requirement
- Can be integrated into existing line or supplied as a stand alone




Head Space Sterilizer

Design Characteristics

Descon head space sterilizers are designed for strength, rigidity, and performance.

- 11 gauge formed stainless steel frames
- Bolt together modular design
- UHMW carryway
- Roller return way
- Folded channel pivoting leg supports
- Down bottle rejection shoots guarantee maximum up time
- Drive and idler ends are fully enclosed with pivoting access doors

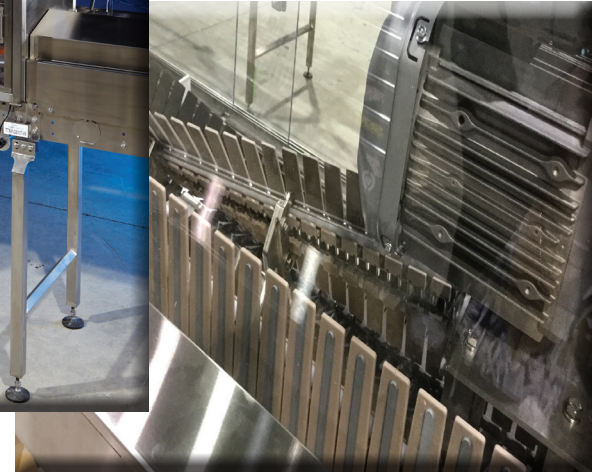

Available Options

Head Space Sterilizers can be supplied as stand alone or part of an integrated conveyor systems.

- Easily integrated to existing conveyor system
- Infeed and discharge conveyors available